

<b>DTC displayed</b>	<b>Error Name</b>
<b>03-7FA81.03</b>	Clutch/Gearbox/MCR valve Fault: Signal voltage above threshold
<b>03-7FA81.05</b>	Clutch/Gearbox/MCR valve Fault: Open load
<b>03-7FB00.11</b>	Calibration Error Warning
<b>03-7FB01.11</b>	Calibration Error
<b>03-7FC15.02</b>	TSC1 CAN Message Fault: initialization
<b>03-7FC15.31</b>	TSC1 CAN Message Fault: invalid signal received
<b>03-7FC20.11</b>	EEC1 CAN Message Fault: generic error
<b>03-7FC20.09</b>	EEC1 CAN Message Fault: time out
<b>03-7FC20.02</b>	EEC1 CAN Message Fault: counter error
<b>03-7FC21.11</b>	ET1 CAN Message Fault: generic error
<b>03-7FC21.09</b>	ET1 CAN Message Fault: time out
<b>03-7FC21.02</b>	ET1 CAN Message Fault: counter error
<b>03-7FC22.11</b>	HMI1 CAN Message Fault: generic error
<b>03-7FC22.09</b>	HMI1 CAN Message Fault: time out
<b>03-7FC22.02</b>	HMI1 CAN Message Fault: counter error
<b>03-7FC23.11</b>	HMI2 CAN Message Fault: generic error
<b>03-7FC23.09</b>	HMI2 CAN Message Fault: time out
<b>03-7FC23.02</b>	HMI2 CAN Message Fault: counter error
<b>03-7FC24.11</b>	HMI4 CAN Message Fault: generic error
<b>03-7FC24.09</b>	HMI4 CAN Message Fault: time out
<b>03-7FC24.02</b>	HMI4 CAN Message Fault: counter error
<b>03-7FC25.11</b>	HMI5 CAN Message Fault: generic error
<b>03-7FC25.09</b>	HMI5 CAN Message Fault: time out
<b>03-7FC25.02</b>	HMI5 CAN Message Fault: counter error
<b>03-7FC26.11</b>	MacIfc1 CAN Message Fault: generic error
<b>03-7FC26.09</b>	MacIfc1 CAN Message Fault: time out
<b>03-7FC26.02</b>	MacIfc1 CAN Message Fault: counter error
<b>03-7FC27.11</b>	MacIfc2 CAN Message Fault: generic error
<b>03-7FC27.09</b>	MacIfc2 CAN Message Fault: time out
<b>03-7FC27.02</b>	MacIfc2 CAN Message Fault: counter error

#### 120.4.4 ENGINE ECU ERROR CODES

Table 92. ENGINE ECU CODES

<b>DTC displayed</b>	<b>J1939</b>		<b>Error Name</b>
	<b>SPN</b>	<b>FMI</b>	
<b>00-07F8A0.2</b>	522400	2	Crankshaft signal error
<b>00-07F8A0.5</b>	522400	5	No signal from crankshaft
<b>00-07F8A1.2</b>	522401	2	Crankshaft signal error
<b>00-07F8A1.5</b>	522401	5	No signal from crankshaft
<b>00-07FBF1.5</b>	523249	5	Crankshaft/camshaft speed sensor non-input (simultaneous)
<b>00-5B.3</b>	91	3	Accelerator sensor 1 error (voltage high)
<b>00-5B.4</b>	91	4	Accelerator sensor 1 error (voltage low)